


# ANGLE OF INCIDENCE

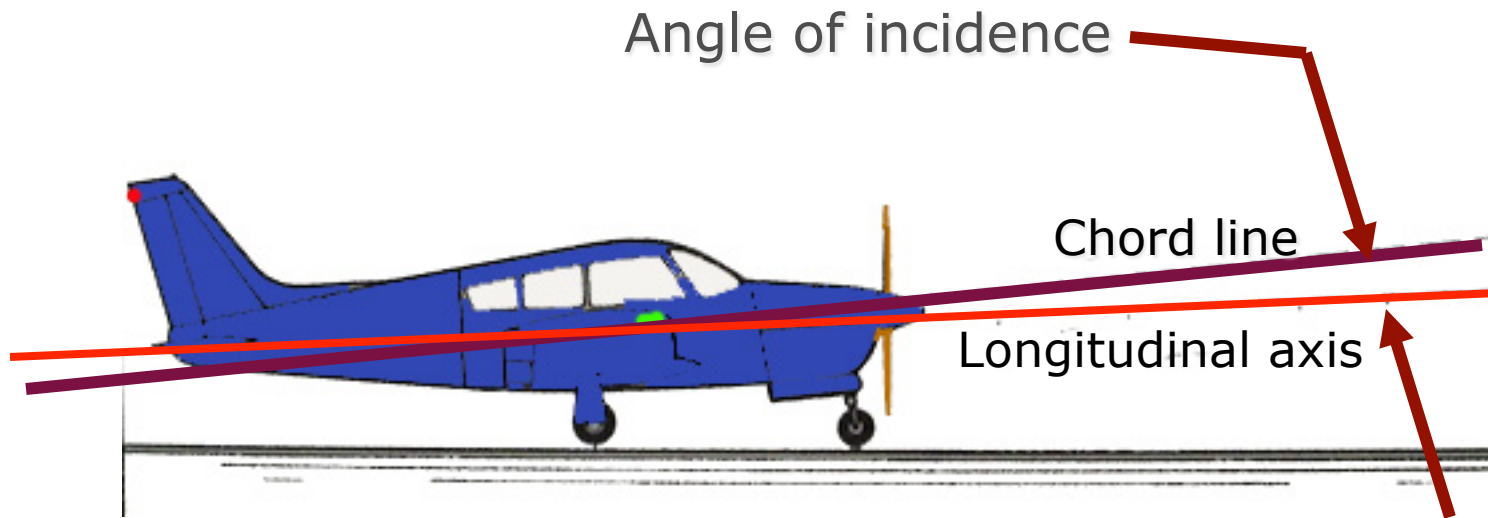

- Angle of incidence is the fixed angle between the plane of the wing (wing cord) and the longitudinal axis of an aircraft.
- Angle of incidence does not change in flight.